SILKSECRET Your Pleasure. Your Journey. Our Tools.



Vibrator With G-Spot

& Anal Stimulator

PRODUCT MANUAL

10 vibration modes

Ergonomic design

Waterproof & Quiet

Made from ABS & Silica Gel

Charging

- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port.
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 1,5 hours for 1 hour of play.
- Do not use the device while charging.



Size: 205*110*29mm

How to Use

Power Button

- Hold for 2-3 seconds to turn the toy ON or OFF.
- The light will glow softly when the toy is on.

Vibration Modes (+ / - Buttons)

- Press the "+" button to move forward through 10 vibration modes—each offering a unique rhythm.
- Press the "-" button to return to a previous mode if you'd like to revisit a favorite.

Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.





Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purpose or for a use that has an adverse effect on any function of the body is prohibited.



www.silksecret.com.au

Need to Get in Touch?

Email: support@silksecret.com.au

