SILKSECRET Your Pleasure. Your Journey. Our Tools.



10 vibration modes


Ergonomic design

Waterproof & Quiet

Made from silicone and ABS plastic

Charging

- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port.
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 2,5 hours for 1 hour of play.
- Do not use the device while charging.

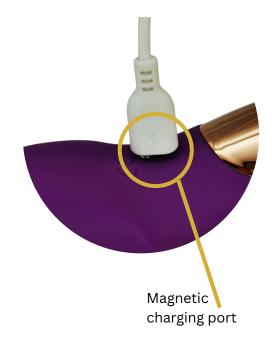

Size: 185*78*40mm

How to Use

Turning On

- Hold the Power Button for 2-3 seconds to turn the toy ON (standby mode).
- The button will softly glow to let you know it's active.


Exploring Vibrations

While in standby mode:

- Short press the internal end motor button to cycle through 10 internal vibration modes.
- Short press the external end motor button to explore 10 external vibration modes.

Stopping Vibrations

- To stop the external vibrations, long press the external motor button.
- To stop the internal vibrations or fully turn the toy OFF, hold the Power Button again for 2-3 seconds.

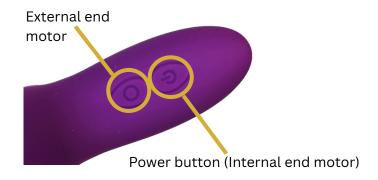

Cleaning and Care

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.



Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purpose or for a use that has an adverse effect on any function of the body is prohibited.



www.silksecret.com.au

Need to Get in Touch?

Email: support@silksecret.com.au