

# SILKSECRET

Your Pleasure. Your Journey. Our Tools.



## Beginner Player

G-Spot & Clitoral Vibrator

PRODUCT MANUAL

10 vibration modes

Ergonomic design

Waterproof & Quiet

Made from silicone  
and ABS plastic

Size: 186\*27mm

## Charging

- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port.
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 2 hours for 1,5 hours of play.
- Do not use the device while charging.



DC Pin charging port

## How to Use

---


### Power Button

- Hold the Power Button for 2–3 seconds to turn the toy ON or OFF.
- When on, the button will softly glow.

### Vibration Modes

- Short press the power button to cycle through 10 vibration patterns—each with its own rhythm and intensity.

Power button (vibration mode)

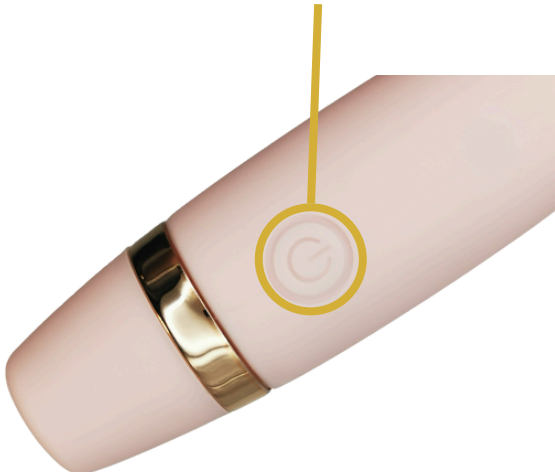

## Cleaning and Care

---

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.



## Warning

---

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purpose or for a use that has an adverse effect on any function of the body is prohibited.



**SILKSECRET**  
Your Pleasure. Your Journey. Our Tools.

[www.silksecret.com.au](http://www.silksecret.com.au)

**Need to Get in Touch?**

Email: [support@silksecret.com.au](mailto:support@silksecret.com.au)