# SILKSECRET Your Pleasure. Your Journey. Our Tools.




PRODUCT MANUAL

10 vibration modes + Increase in inflation Clitoris stimulation Ergonomic design Waterproof & Quiet USB rechargeable Made from silicone and ABS

## **Charging**

- For maximum pleasure charge before every use.
- Connect the included USB cable and insert the USB end into the wall adaptor or computer USB port.
- The slow intermittent glow indicates charging in progress.
- A full charge takes up to 2 hours for 1,5 hours of play.
- Do not use the device while charging.

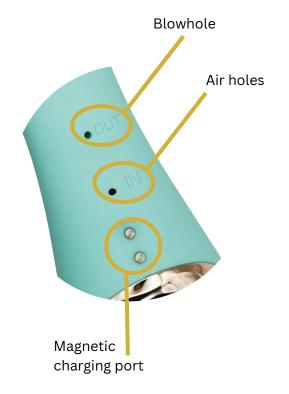

Size: 194.24\*59.27\*42.1mm


### **How to Use**

#### **Power & Vibration Modes**

- Hold the Power Button for 2-3 seconds to turn the toy ON or OFF.
- Press the Power Button quickly to explore the 10 vibration modes.
- To stop the vibrations, you'll need to cycle through all 10 modes — or turn the toy off by holding the button again.
- The power button will glow when the toy is on.

#### **Inflation & Deflation**

- Press (or hold) the Inflate Button to slowly inflate.
- When fully inflated, the Inflate Button will glow intermittently.
- Press the Deflate Button once to release the air.
- You can use the Inflate/Deflate functions at the same time as the vibrations, if desired.

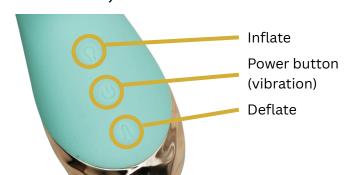

## **Cleaning and Care**

- Use a toy cleaner/mild soap with water to clean the product before and after each use.
- Pat with a towel and allow it to air-dry completely.
- Use with the water-based lube only, no silicone lubricants.



## Warning

- Do not use on inflamed and injured areas.
- Discontinue use if feeling pain or discomfort.
- Adult novelty only. Use for medical purpose or for a use that has an adverse effect on any function of the body is prohibited.



www.silksecret.com.au

Need to Get in Touch?

Email: support@silksecret.com.au